

Manual HDD convert GPT | MBR

"The best choice in memory & data storage solutions"





How to convert your harddrive from MBR to GPT or GPT to MBR:

- Click with your left mouse button on the windows search bar:



- Make sure the disk does not have a volume on it. If the disk does not have a volume on it continue at B.

A. removing the volume

(BE AWARE! THIS REMOVES ALL THE DATA FROM YOUR HARDDRIVE!)

- Right click on the storage bar of your disk:

2	Open
1	Explore
	Mark Partition as Active
	Change Drive Letter and Paths
	Format
	Extend Volume
-	Shrink Volume
	Delete Volume
	Properties
-	Help



B1. Converting the disk from MBR to GPT.

- Right click the square of the disk itself:

Disk 1 Basic	
111.79 GB Online	New Spanned Volume
	New Striped Volume
	Convert to Dynamic Disk
Unalloca	Convert to GPT Disk
	Properties
	Help

B2. Converting the disk from GPT to MBR.

- Right click the square of the disk itself:

- Disk 1 Basic	
111.77 GB Online	New Spanned Volume New Striped Volume
	Convert to Dynamic Disk
Unallocat	Convert to MBR Disk
_	Properties
	Help

That is all there is to it!

Still got any questions? Don't hessitate to contact us:

Xstra Digital Storage B.V. The Netherlands : +31 (0)162 747 016 Het Goorke 61 NL-4906 BD Oosterhout info@xstra.eu Monday to Friday 8:00 am - 5:00 pm